




NewBonneville “BillyBar” Highway Bars SHORT

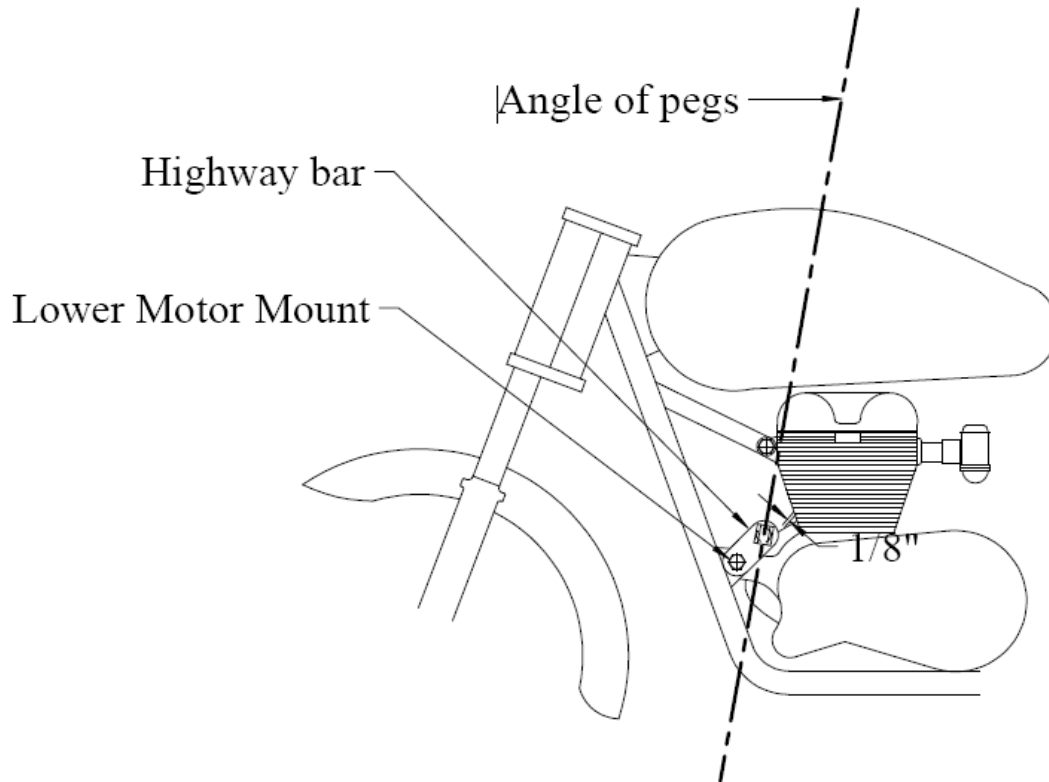

Left side of bike shown

- 1) Remove lower motor mount bolt
- 2) Note the angle of the foot peg when it is in the up position. It should be leaning towards the rear of the bike.
- 3) Place the bar mounting tabs over the frame tabs. Replace the motor mount bolt through bar tabs, frame and motor mount holes
- 4) Note on the right side of the bike, be sure to hold about 1/8" clearance between the bar and the motor casing.
- 5) Torque to 80 Nm./60lb.ft.